



Thank you for purchasing the Vrocker-eS!

Welcome to the world of interactive audio. With your new Vrocker-eS you can now not only hear your music but actually FEEL it. Whether you are listening to music, watching a movie, or playing a game, you will become a part of it.

Get ready to experience sound as you never have!

Thank you for your purchase. We know you will enjoy your Vrocker-eS experience as much as we do.

CAUTION: IF YOU ARE EXPERIENCING HEART RELATED PROBLEMS, PLEASE CONSULT WITH YOUR DOCTOR BEFORE USING THIS PRODUCT.

DO NOT RETURN THIS PRODUCT TO THE STORE. CALL 1-866-969-2603 FOR TROUBLE SHOOTING ADVICE.

FEATURES

A-Control Panel

- A1-Power on Indicator Light
- A2-Audio Input Jack
- A3-Audio Output for Multi-user
- A4-Volume Adjustment
- A5-Sub Volume Adjustment
- A6-Power On/Off Button Switch
- A7-9V AC Power Input Jack
- A8-Headphone Plug in Jack

B-Accessories Supplied with Vrocker-eS

- B1-RCA stereo male to 3.5mm stereo plug cable (1 pc)
- B2-INPUT: 120VAC 60Hz
OUTPUT: 9VAC 600mA 5.4W AC main power adapter
- B3-RCA Female-to-Female plug adapter (2 pcs)
- B4-RC Stereo to Mini Plug Adapter

C-Specification for Vrocker-eS

- Power output: RMS 2W X 2 (THD = 10%)
- Signal-to-Noise Ratio (Amplifier): Satellite: >60dB
- Frequency Response: 350Hz~45kHz
- Distortion: Satellite: <1% (F = 1kHz)
- Input: AC 9V / 0.6A

TROUBLE SHOOTING

- Unable to connect to gaming console –

Most gaming consoles are shipped from the manufacturer with an Audio/Video RCA cable. The A/V RCA cable has three RCA plugs: a video plug (yellow) and two audio plugs (red and white). If your gaming console came with an A/V RCA cable, please follow the instructions supplied by the manufacturer for setting it up and connecting it to the TV. Please note that you must leave the red and white audio jacks on the A/V cable UNCONNECTED. Once the console is properly connected to your TV, please follow the diagram in the illustrated Vrocker-es set-up guide to connect the gaming console to the Vrocker-es. If your gaming console was shipped with a coaxial cable, instead of an A/V RCA cable, you must follow an alternate set-up procedure (coaxial cable is the same type of cable that is used to connect a VCR to a TV). You will quickly recognize if your gaming console uses this type of cable. It connects the gaming console directly to the television and carries both the audio and video signal over a single cable. If your gaming console uses a coaxial cable, you CAN NOT connect it directly to the Vrocker-es. Instead, you have two alternatives:

1. Use an intermediary A/V device (such as a TV, VCR, DVD, TiVo, etc).
 - a. Connect your gaming console to the intermediary A/V device via the coaxial cable.
 - b. Connect the Vrocker-es to the 'Audio Out' jack on the intermediary A/V device. This allows an indirect connection of the Vrocker-es to your gaming console, through the intermediary A/V device. To accomplish this successfully, your intermediary A/V device MUST have both:
 - I . A coaxial jack (the standard jack for TV cables that is found on most televisions, VCRs, DVDs, etc).
 - II . An RCA audio output jack ('Audio Out' jack).
 - c. Follow diagram 2 in the Vrocker-es set-up guide to connect the Vrocker-es to the intermediary A/V device and finalize the setup.
2. Purchase an A/V RCA adapter cable for your console: If your intermediary A/V device does not have an 'Audio Out' jack, you must contact the gaming console manufacturer/dealer and request the 'Audio/Video RCA output cable' for your console. Please note that the Ace Bayou Service Center does not supply this cable for your console. You can obtain it only from the console manufacturer or an authorized dealer for your gaming console.

Unable to hear any sound from the Vrocker-eS-

1. Check to ensure that the power adapter is properly connected to the power jack (A7). When properly connected, the logo (A1) on the control panel should light up when the power switch (A6) is turned on. If the logo (A1) does not light up, try to use another power outlet in your home.
2. Make sure that the power switch on the control panel (A6) is turned on. The "Vrocker-eS" logo power on indicator light (A1) on the control panel should be lit. If it is not, please press the power switch (A6) on the control panel.
3. Once you have successfully completed steps 1 and 2, please review the V rocker set-up guide and make sure your audio connections are correct. If the audio connections are correct, please make sure that the volume on both the Vrocker-eS (A4) and the audio source (game console, VCR, TV, etc.) are turned up to an audible level.
4. If you have successfully completed steps 1 through 3 and you still cannot hear any sound, try to connect another audio source that works well, such as a CD player, TV, VCR, alternate game console, etc. Please be sure to follow steps 1 through 4 with each device. If you still fail to hear any sound, please contact the Ace Bayou Service Center via email (service@acebayou.com) or toll free telephone (866-969-2603) to request assistance.

Please go to www.xfunctional.com for answers to frequently asked questions.

FUNCTIONS:

page 4

- Foldable construction for ease of storage and portability.
- Side control panel with volume, bass control, input/output jacks and band switch.
- Ergonomic design with full back support.
- Hardwood frame construction with dual layer foam cover for extra comfort.
- Easy to clean, heavy duty, upholstery grade vinyl cover.

READ BEFORE USAGE:

- Always make sure the hinge is locked before moving the unit.
- Always make sure the hinge is locked before sitting in the Vrocker-es.
- Excessive use of audio equipment could lead to hearing loss.
- Children under the age of 13 should not use this product without adult supervision.
- Strictly for indoor use. Do not expose to direct sunlight, moisture or extreme temperatures.
- If the cover becomes wet disconnect power immediately and don't use until it is completely dry.
- Do not attempt to remove the cover or any components. Removal of the cover or tampering with components puts you at risk for injury or death from electrical shock.



PICTURE OUT OF BOX



POSITIONING FOR SECURING PIN AND VELCRO FLAP



SITTING POSITION

SET UP

- Lift the V Rocker out of the box by opening the top and turning the box over DO NOT LET THE UNIT FALL OUT. Slide the box off of the unit. Do not grab the sides of Vrocker-es as that may lead to accidental speaker damage.
- Keep the chair in the folded position and place it on the floor so that back side of the chair is touching the floor and the bottom of the seat is facing up.
- Position the chair on the floor so that both the headrest and foot of the seat are touching the floor. This is shown above in the "POSITIONING FOR SECURING PIN AND VELCRO FLAP" diagram.
- Insert the included pin into the closure. Pull and secure the Velcro flap to hide pin and closure.
- Review the set-up diagrams to familiarize yourself with the Vrocker-ess components, accessories, and set-up.
- Remove all of the included accessories from the accessory pack that is included with your chair.
- Carefully turn chair over.
- Locate the input/output panel on the right side of the seat. Make sure that the control panel is not more than 10ft / 3 meters from the audio source and 6ft / 2 meters from a power source.
- Unpack the power adapter, plug it into a power outlet and connect it to the power jack (A7) on the control panel.
- Press the power button (A6) and confirm that the power indicator light (A1) is on.
- Follow the diagrams to connect the Vrocker-eS to the audio source of your choice.
- Adjust the bass and volume levels to your preference...start rocking

WARRANTY PAGE

Ace Bayou warrants this product (including any accessories) against defects in material and workmanship for a period of 12 months from the date of purchase. This warranty is enforceable only by the original purchaser. ALL DAMAGED OR MISSING PARTS MUST BE REPORTED WITHIN 14 DAYS OF PURCHASE.

This warranty covers all defects in material and workmanship in this product, but DOES NOT COVER the following:

1. Damage, deterioration or malfunction resulting from:
 - a. Acts of God, accident, misuse, abuse, negligence, improper installation, maintenance or operation, or failure to follow the instructions contained in this owner's manual.
 - b. Any damage in the shipment of the product. (Claims must be presented to the carrier.)
 - c. Repair, attempted repair, or modifications by anyone other than the Ace Bayou Service Center.
2. Any unit which has been modified or attempted to be modified or altered in any way whatsoever.
3. Normal wear and periodic maintenance.
4. Any unit used for industrial or commercial purposes (including rental).
5. Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses, batteries, etc).
6. Customer installation, set up adjustments, or signal reception problems.

Ace Bayou will repair or replace (at its discretion) units covered by this warranty without charge to the consumer for labor or materials. YOU ARE RESPONSIBLE FOR INITIAL SHIPPING CHARGES. However, we will pay the return shipping charges to any destination within the USA if repairs are covered by the warranty.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ACE BAYOU SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE LENGTH OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

DO NOT SHIP ANYTHING TO US WITHOUT CONTACTING US FIRST. DO NOT SHIP ANY PARTS OR WHOLE UNITS TO THIS ADDRESS FOR REPAIR WITHOUT OUR PERMISSION.

For service assistance, product information, or to locate a dealer nearest you please call or write to:

Ace Bayou Corp
PO Box 1853
Lewisburg, TN 37091
1-866-969-2603
service@acebayou.com

IMPORTANT

You must keep your original retail receipt as proof of purchase.

For further information on how to order accessories for this product, please visit our website:

www.xfunctional.com